

# Navigator Radio, Total Direction Control (TDC)

A complete package giving the user full wire free control of the AutoClay 320 together with modular upgrades of the Oscillating Base and Vertical Lift, pre-programmed and ready to go.

The package comprises of : Radio Controller, Radio Receiver and a Navigator Radio Control Box.

- 1. = Instant Fire** Press Once  
or for a 25 Target Flush hold for 3 seconds (press once should cancellation mid flush be required)
- 2. = 3 Second Delayed Fire** - Press Once  
or for a Following Target hold for 3 seconds to activate two targets, one following the other
- 3. = Horizontal Movement** = moves in a cycle horizontally - press once to cancel
- 4. = Vertical Movement** = moves in a cycle vertically - press once to cancel
- 5. = Horizontal Inching** = Precision movement by pressing and releasing to set
- 6. = Vertical Inching** = Precision movement by pressing and releasing to set
- 7. = DTL** = Automatic Down The Line Target release
- 8. = ABT** = Automatic Ball Trap random target release

- 1. Instant Fire Single Target**  
Press once for a single target  
**or: 25 Target Flush**  
Hold the button down for 3 seconds to activate 25 continuous targets, press once to cancel
- 3. Horizontal Random Movement**
- 5. Horizontal Inching**  
Press to attain the exact angle acquired
- 7. DTL**  
**Down the Line**



- 2. Three Second Delay for Single Target**  
Press once for single target delayed for 3 seconds  
**Or: Following Target**  
Hold the button down for 3 seconds to activate two targets, one following the other
- 5. Vertical Random Movement**
- 6. Vertical Inching**  
Press & release until exact angle acquired
- 8. ABT**  
**Automated Ball Trap**

Switches for continuous vertical rotation, off to park trap and auto on

Connection to trap

Connection for 12V power



Plug in socket for radio

